

3-Key 3D USB+PS/2 Optical Mouse Controller

Features

- Operating voltage: 4.4V~5.25V
- Complete Universal Serial Bus specs V1.1 compatibility
- · Serial Bus Interface Engine (SIE)
- · USB transceiver
- Microsoft 3D Intelli mouse and IBM PS/2 mouse compatible
- · Supports three buttons (R, M, L) and Z-axis input
- Z-axis can support two kinds of scroller input (optomechanical and mechanical)
- Single chip solution especially for USB mouse function

- HALT function and wake-up feature reduce power consumption
- · Plug and Play functions
- · Minimal external components
- · 6MHz crystal oscillator for system clock
- Interface compliant with ADNS-2051, ADNS-2610 and ADNS-2620
- Pass WHQL, USB-IF and EMC testing
- 18-pin DIP package




General Description

HT82M21A is a 3D mouse controller especially designed for USB and PS/2 applications. The HT82M21A can support the USB Standard Request as well as HID Class Request version 1.1. It is compatible with Microsoft Intelli 3D PS/2 mouse. The Z-axis can support two kinds of scroller input, namely; optomechanical and


mechanical. It requires minimal external components to implement 3D USB plus R\$/2 optical mouse. It can be briefly described as a Holtek 8-bit MCU with an on-chip USB interface logic. The USB is specified by the *Universal Serial Bus Specification V1.1*.

Block Diagram

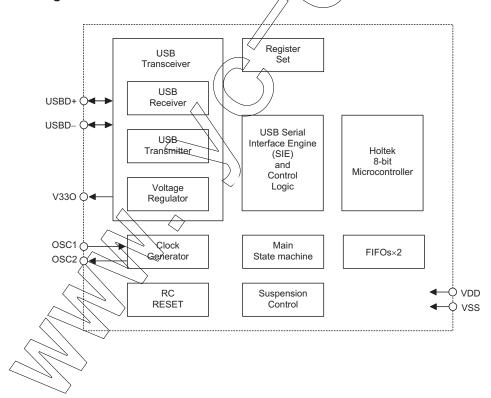



Pin Assignment

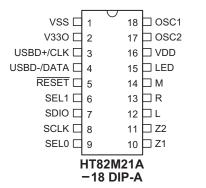

Pin Description

	TIPLIOTI	1	
Pin No.	Pin Name	I/O	Description
1	VSS	_	Negative power supply, ground
2	V33O	0	3.3V voltage output
3	USBD+/CLK	I/O	USB data plus or PS2 Clock, F/W auto-detect USBD+ for USB, CLK for PS2
4	USBD-/DATA	I/O	USB data minus or PS2 Data, F/W auto-detect USB for USB, DATA for PS2
5	RESET	I	Chip reset input, low active
6 9	SEL1 SEL0	I	Configuration selections For ANDS 2051: SEL0=0: 800DPI (default) SEL0=1: 400DPI SEL1=0: Z-axis is divided by 2 (default) SEL1=1: Z-axis is divided by 4 For ANDS 2610/2620: SEL1=0, SEL0=don't care: Z-axis is divided by 2 (default) SEL1=1, SEL0=0/ Z/axis is divided by 4 SEL1=1, SEL0=1: Z-axis is divided by 1
7	SDIO	I/O	Serial data for Agilent sensor IC SDIO
8	SCLK	I	Serial data for Agilent sensor IC SCLK
10, 11	Z1, Z2	I	Z-axis input supports two kinds of scroller input; optomechanical and mechanical.
12, 13, 14	L, R, M	I	Input ports with pull-high resistor. These pads can function as Left, Right, Middle.
15	LED	I/O	Drives-LED output
16	VDD	_	5V positive power supply
17	OSC2	0	6MHz OSC output
18	OSC1	I	6MHz OSC input

Absolute Maximum Ratings

Supply Voltage V_{SS} -0.3V to V_{SS} +6V Storage Temperature-50°C to 125°C MCU Input Voltage V_{SS} -0.3V to V_{DD} +0.3V Operating Temperature-25°C to 70°C USB Input Voltage V_{SS} -0.3V to V_{33O} +0.3V

Note: These are stress ratings only. Stresses exceeding the range specified under "Absolute Maximum Ratings" may cause substantial damage to the device. Functional operation of this device at other conditions beyond those listed in the specification is not implied and prolonged exposure to extreme conditions may affect device reliabilities.



D.C. Characteristics Ta=25°C

Ch.al	D	Test Conditions			Min.	Тур.	Max.	Unit
Symbol	Parameter		Conditions					
V_{DD}	Operating Voltage	_			4.4	_	5.25	V
I _{DD}	Operating Current (Crystal OSC)	5V	No load, f _{SYS} =6MHz	USB mode		10		mA
				PS/2 mode		3		mA
I _{STB}	Standby Current 5V		No load, system HALT		_	_	250	μA
V_{IL1}	Input Low Voltage for I/O Ports	5V —		0	_	7.0		
V _{IH1}	Input High Voltage for MCU I/O Ports	5V	_		3.5	-//	5	V
V _{IL2}	Input Low Voltage (RESET)	5V	_		0	+(1.5	V
V _{IH2}	Input High Voltage (RESET)	5V —		3.5		5	V	
V _{IH3}	Input High Voltage for USB I/O Ports 3.3		_	_	2.8	7	3.6	V
V _{POR}	Power on Reset V _{DD} Detection 5V —		_	3.5		3.9	V	
I _{OL1}	Output Port Sink Current 5V V _{OL} =0.5V			_	4	_	mA	
I _{OH1}	Output Port Source Current	5V	V _{OL} =4.5V		_	-4	_	mA
I _{OL2}	Output Port Sink Current (LED)	5V	V _{OL} =4.5V		\nearrow	50	_	mA

A.C. Characteristics


Ta=25°C

Symphol	Parameter		Test Conditions		Time	Max.	Unit
Symbol	Parameter	V_{DD}	Conditions	Min.	Тур.	wax.	Uilit
f _{SYS}	System Clock (Crystal OSC)	5V		0	6000	_	kHz
t _{OST}	Oscillation Start-up Timer Period	_	Power-up or-wake-up form HALT		1024	_	t _{SYS}


Note: $t_{SYS}=1/f_{SYS}$

Timing Diagram

Z-axis Photo-Coupler Crossed Width




Note: For Z-axis t_r , t_P , $t_f > 1 ms$

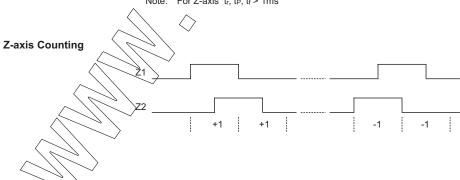



Application Circuits

This Application Circuit is for Reference Only

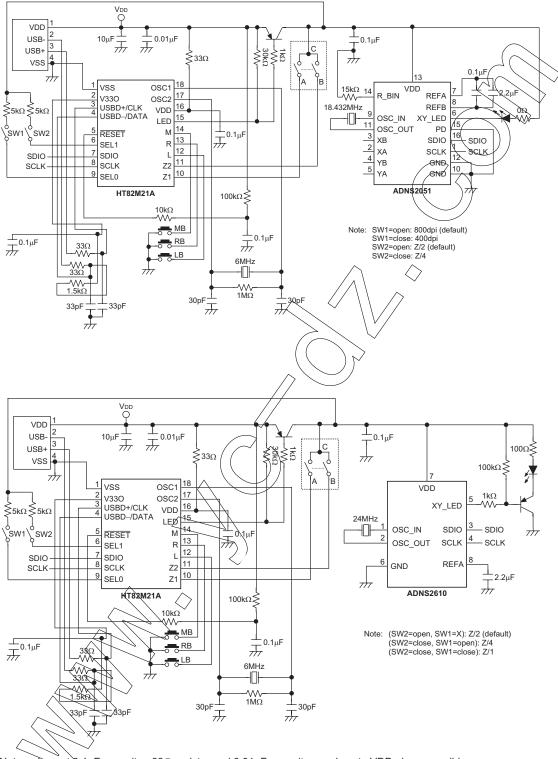


Note: Layout $0.1\mu F$ capacitor, 33Ω resistor and $0.01\mu F$ capacitor as close to VDD pin as possible.




Package Information


18-pin DIP (300mil) Outline Dimensions

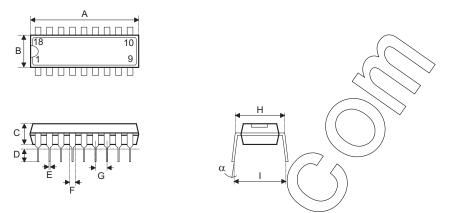


Symbol	Dimensions in mil						
Зуший	Min.	Nom.	Max.				
Α	895		915				
В	240		260				
С	125	<u> </u>	135				
D	125		145				
Е	16		20				
F	50		70				
G	_	/> 100	_				
Н	295	// –	315				
I	335	-	375				
α	0°	_	15°				

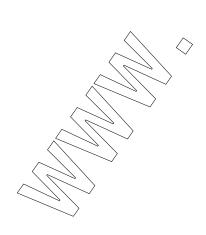



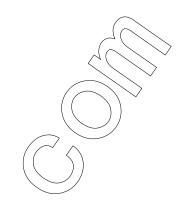

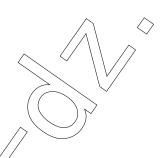

Holtek Semiconductor Inc. (Headquarters)

No.3, Creation Rd. II, Science Park, Hsinchu, Taiwan

Tel: 886-3-563-1999 Fax: 886-3-563-1189 http://www.holtek.com.tw

Holtek Semiconductor Inc. (Sales Office)

4F-2, No. 3-2, YuanQu St., Nankang Software Park, Taipei 115, Taiwan Tel: 886-2-2655-7070

Fax: 886-2-2655-7373

Fax: 886-2-2655-7383 (International sales notline)

Holtek Semiconductor (Shanghai) Inc.

7th Floor, Building 2, No.889, Yi Shan Rd., Shanghai, China

Tel: 021-6485-5560 Fax: 021-6485-0313 http://www.holtek.com.cn

Holtek Semiconductor (Hong Kong) Ltd.

Block A, 3/F, Tin On Industrial Building, 777-779 Cheung Sha Wan Rd., Kowloon, Hong Kong Tel: 852-2-745-8288

Fax: 852-2-742-8657

Holmate Semiconductor, Inc.

46712 Fremont Blvd., Fremont, CA 94538

Tel: 510-252-9880 Fax: 510-252-9885

http://www.holmate.com

Copyright 2003 by HOLTEK SEMICONDUCTOR INC.

The information appearing in this Data Sheet is believed to be accurate at the time of publication. However, Holtek assumes no responsibility arising from the use of the specifications described. The applications mentioned herein are used solely for the purpose of illustration and Holtek makes no warranty or representation that such applications will be suitable without further modification, nor recommends the use of its products for application that may present a risk to human life due to malfunction or otherwise. Holtek's products are not authorized for use as critical components in life support devices or systems. Holtek reserves the right to alter its products without prior notification. For the most up-to-date information, please visit our web site at http://www.holtek.com.tw.